



Loving music

Statement V2

User manual



Pic. similar

User manual

Dear **Clearaudio** customer,

Congratulations on your purchase of the *Statement V2* turntable.

You have purchased a state-of-the-art turntable, the *Statement V2*, a world class product from **Clearaudio electronic GmbH**.

The special resonance-optimised construction, the external motor-unit and the patented **Clearaudio** - *CMB*-bearing-technology guarantees absolute speed stability, pure pleasure in listening and reproduction absolutely faithful to the original.

Thank you very much your confidence.

Please read this user manual carefully to ensure that your *Statement V2* turntable is correctly installed ready to take you to a new dimension of music reproduction.

We hope you will enjoy your new **Clearaudio** *Statement V2* turntable.

Clearaudio electronic GmbH

Please read the warning before connecting your *Statement V2* turntable to the mains supply.



Loving music

User manual



Important Safety Instructions



1. General Information

- Read these instructions and keep them for future reference. Follow all instructions carefully.
- Not suitable for children under 6 years! The product may contain small parts that could be swallowed. Risk of suffocation from plastic films and small parts. Keep plastic films, bags, straps, etc., out of reach of children, as they pose a suffocation hazard. Children may strangle themselves with cables. Keep cables out of reach of children.
- Inspect the device for damage before use. If the device is damaged, do not connect it to the power supply! Repairs or maintenance are required if any damage is detected, such as to the power cable or plug, if liquid or objects have entered the device, if it has been exposed to rain or moisture, is not functioning properly, or has been dropped. Contact your retailer for inspection.
- Manual Operation Required: The turntable does not have an automatic stop function. Once the run-out groove is reached, lift the tonearm from the record using the manual lift and turn off the turntable manually.
- **Specific Instructions for Clearaudio Concept Signature and Celebrity "Al Di Meola" Models:**
Restart: If the device becomes unresponsive, restore normal operation by turning it off and on again using the power switch on the back.

2. Intended Use

The turntable is designed for playing vinyl records. Intended use requires compliance with the operating instructions provided. The power supply must be used only within its specified technical parameters. Any other use or modification of the power supply is considered improper.

3. Installation Location

- Avoid locations with direct sunlight, temperature fluctuations, or high humidity. Do not place the device near heaters, heat lamps, or other devices that generate heat. The turntable is intended for use in heated rooms and should only be placed on flat surfaces.
- Never block ventilation slots or cover the device with fabric or similar materials. Do not place objects on top of the device.
- Installing the device in closed cabinets or similar furniture is not permitted.
- Choose a location near a wall outlet to ensure the plug is always easily accessible.
- Never operate electrical devices near water.

4. Connections

- Never bypass the safety features of polarized or grounded plugs. Polarized plugs have two blades, one wider than the other. Grounded plugs have two blades and a third grounding prong. These features are designed for safety. If your outlet is incompatible with the plug, consult an electrician to replace the outlet.
- Ensure that cables are not stepped on, pinched, or subjected to strain near plugs, outlets, or where they exit the device. Regularly inspect cables for damage to their insulation. Replace damaged cables immediately with professional assistance.
- A small standby current is drawn even when the power or standby/on switch is in the "off" position.
- Always unplug the device by pulling the plug, not the cord.

5. Maintenance

- Disconnect the power supply from the mains if the device will not be used for an extended period.
- Use only specialized acrylic glass cleaners for cleaning acrylic parts. Never use alcohol-based liquids (e.g., ethanol or spirits) to avoid surface damage. Avoid aggressive cleaning agents. Do not use dry cloths, as they can cause static buildup. Suitable cleaning and care products from Clearaudio are available at www.analogshop.de or from authorized retailers. Lubricate the turntable bearing approximately every two years with the included bearing oil, using 1-2 drops in the bearing housing.
- Electrical devices contain magnetic storage components. Avoid placing external magnets near the device to prevent damage to magnetic components.

6. Health Warnings

- Prolonged exposure to high volume levels can cause hearing damage. Use high volumes responsibly.
- Heat Development: Exercise caution when touching the device, as the housing may become warm during operation.
- Risk of injury during setup due to heavy components (e.g., pinching fingers while placing the turntable platter).
- Beware of sharp objects that could cause injury.

7. Disclaimer of Liability

Use only accessories approved by the manufacturer. Warranty claims will be void if damage is caused by failure to follow the instructions in the manual. The manufacturer assumes no liability for consequential damages.

Liability Disclaimer: Clearaudio assumes no liability for damage to sound carriers caused by improper handling!

8. Service

- Do not open the device housing to access internal electronics, as it contains no user-serviceable components. This action may void the warranty. Repairs should only be performed by qualified personnel.
- During the warranty period, repairs may only be carried out by the manufacturer. Otherwise, the warranty will be void.
- Service for all Clearaudio products should be conducted exclusively through authorized dealers. If service is needed, return the product to Clearaudio via your retailer.
- In case of malfunctions, contact the retailer where the device was purchased. Do not use the product until it has been repaired.

9. Transport

- Always use the original packaging when transporting the Clearaudio turntable. Pack the device as it was delivered to ensure safe transport. When packing, reverse the setup process as described in the setup and operation instructions.
- Secure the turntable platter and tonearm with adhesive tape for transport.
- Ensure that the platter is packed with the milled side facing up in the bottom packaging layer and that the feet are screwed back into place.

Clearaudio assumes no liability for transport damage caused by improper packing.

10. CE Compliance

This product meets the requirements of European directives and other Commission regulations.



11. Disposal

For customers in Europe: Disposal of old electrical and electronic devices, batteries, and accumulators:

 a) If a product, its packaging, and/or accompanying documentation is marked with the symbol of a crossed-out waste bin, this product is subject to European directives and national laws implementing these directives.

b) These directives and laws stipulate that electrical and electronic waste as well as batteries and accumulators must not be disposed of with household waste (residual waste). To ensure proper disposal, processing, and recycling, you are required to dispose of old devices and discharged batteries/accumulators at designated collection points.

c) By properly disposing of such devices, batteries, and accumulators, you contribute to the conservation of valuable raw materials and prevent potentially harmful effects on public health and the environment that can result from improper waste disposal. Disposal is free of charge for you.

d) For more information on the collection and recycling of old devices, batteries, and accumulators, please contact your local municipal office, the waste disposal company responsible for you, or the point of sale where you purchased the product.

Contents

1. Packaging overview	5 - 6
2. Construction overview	7
3. Setup and operation	8 - 16
4. Motor adjustment	17
5. Troubleshooting	18 - 19
6. Technical data	20
Warranty information	22 - 23

1. Packaging overview

The *Statement V2* turntable is packed and delivered on either a Euro pallet or two half size Euro pallets. The Packing is specially made for the *Statement V2* turntable and should be retained for any repacking.

Please note:

The *Statement V2* turntable is very heavy and will require at least two people to unpack and setup.


Attention / Warning:

IMPORTANT!

Before it is fully assembled there are strong magnetic fields around the main bearing, these could interfere with heart pacemakers and so the *Statement V2* should not be setup by anyone with a pacemaker. The *Statement V2* turntable is extremely heavy and should not be assembled by anyone with back problems.

The two wooden boxes contain the turntable stand and the pendulum weights, as well as five (5) separately packed cartons containing all other parts (e.g. massive metal cross, acrylic chassis, bearings etc).

Please check the accessories contents according to the following list before you setup the turntable.

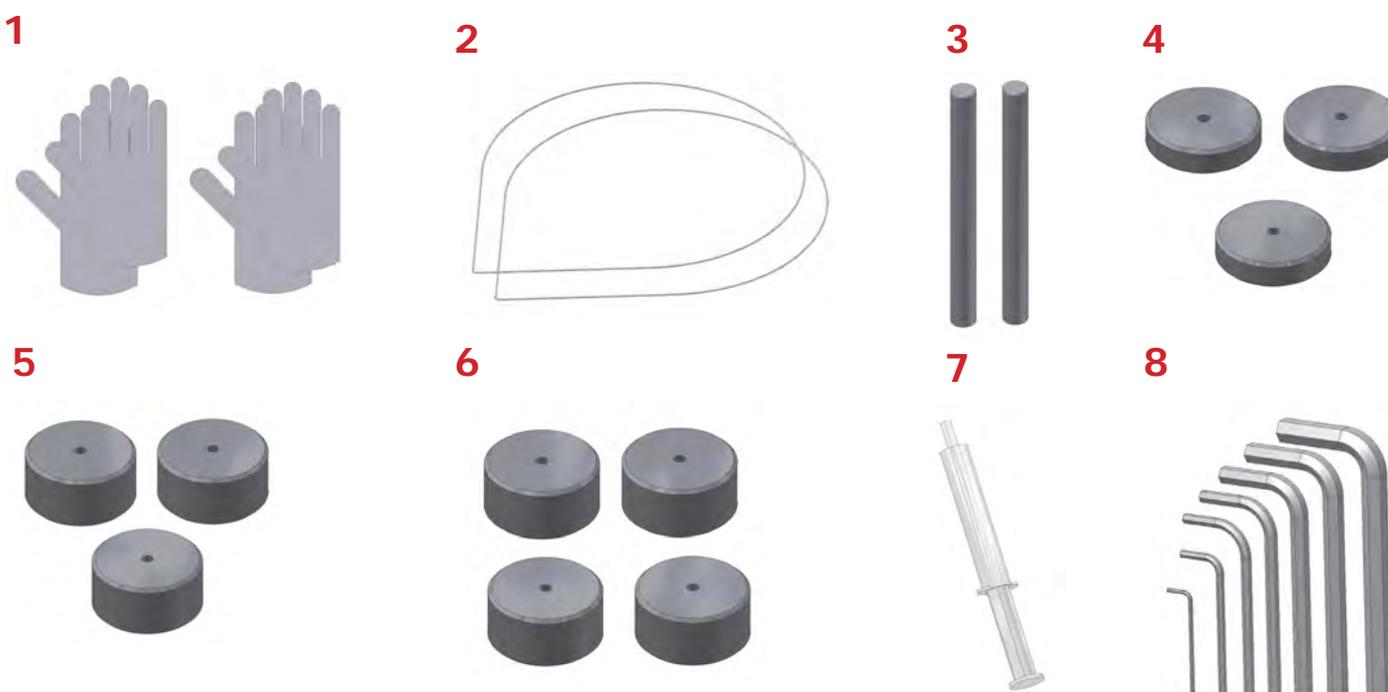

1.	Two pairs of white gloves	5.	Three bases as counter weights (40mm)
2.	Two belts	6.	Four bases as flat pads
3.	Tool for adjustment of stainless steel discs (pendulum weight)	7.	Polishing paste
4.	Three bases as counter weights (20mm)	8.	A set of hex wrenches

9



10



11



12




13



9.	Bearing oil	13.	Bubble level gauges
10.	Acrylic cleaner	14.	Not shown: Two wooden blocks
11.	Screwdriver	15.	Not shown: User manual
12.	Statement clamp	16.	Not shown: Warranty card, Clearaudio certificate card (QCQ)

2. Construction overview

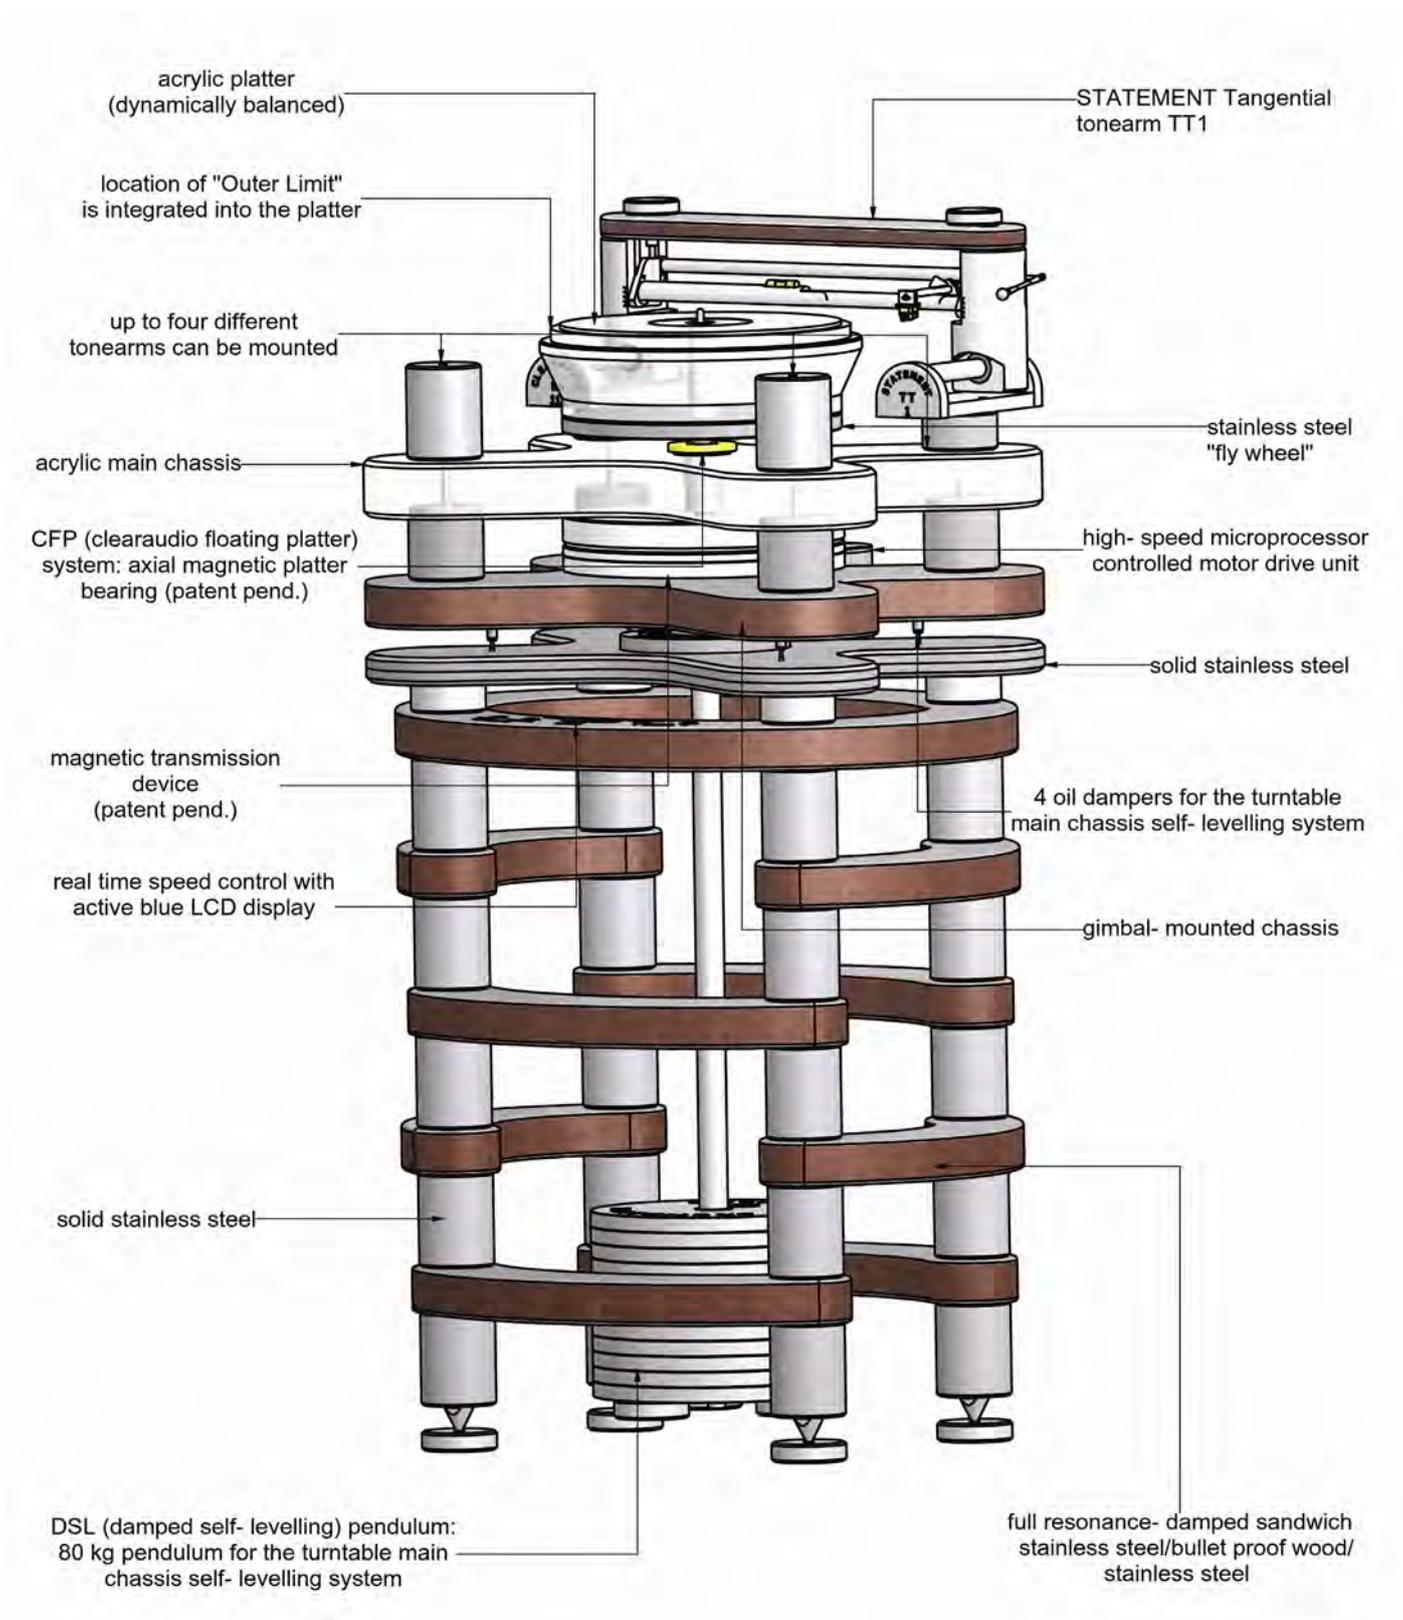

Pic. 1: Construction overview

3. Set up and operation

1. Select the position in which you will use the *Statement V2* turntable. Place the *Statement V2* turntable base in this position on the four supplied feet.



Pic. 2: Placing the *Statement*




Pic. 3: Placing the *Statement*

2. Place the two wooden blocks beneath the *Statement V2* base as shown.

User manual

IMPORTANT!

Being careful not to damage the bearing spindle on top of the pendulum shaft, assemble the pendulum, starting by sliding a solid metal disc over the pendulum shaft so that it rests on the wooden blocks. Be sure to place a felt mat between each metal disc, building the pendulum with three solid discs at the bottom, then six half-cut-away discs, then two more solid discs, finally adding the solid disc engraved with the words **Clearaudio Statement V2**.

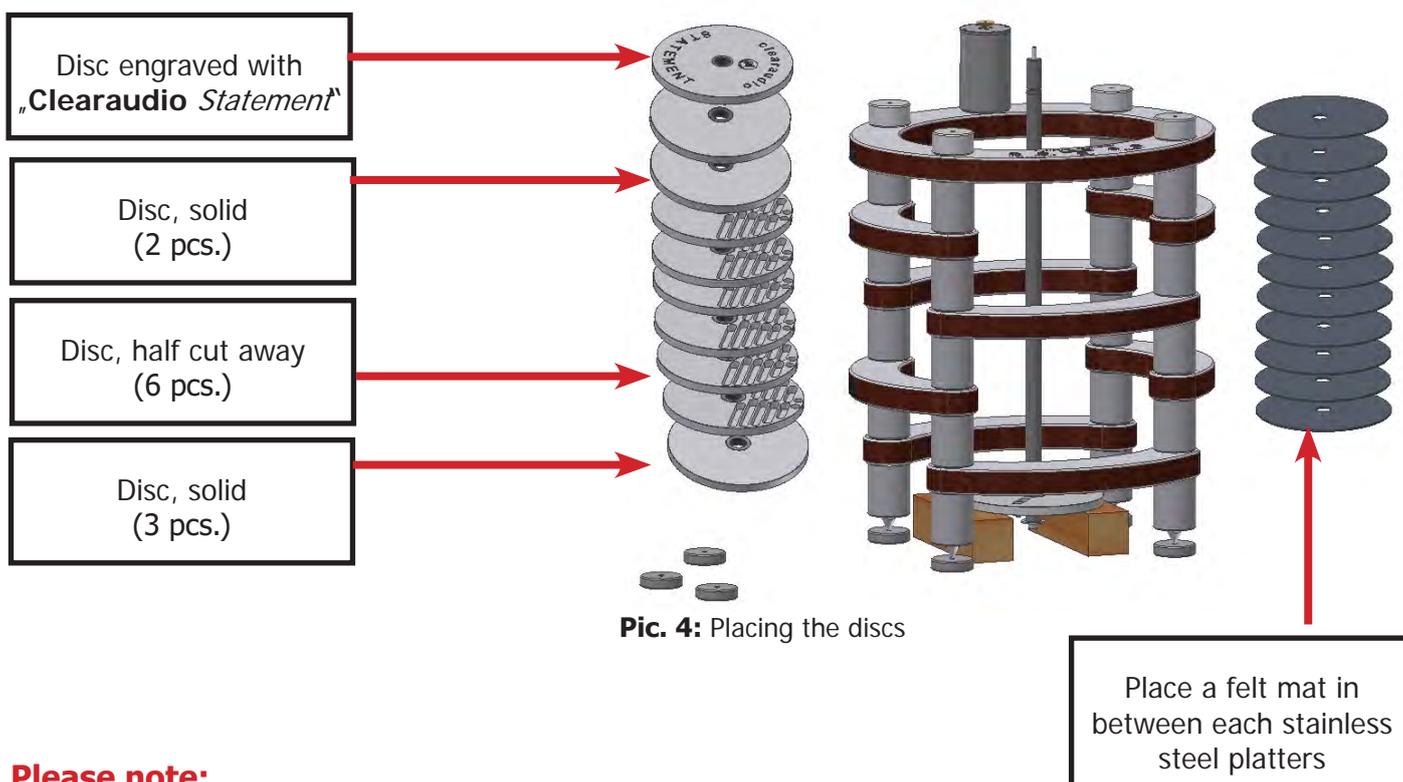

Pic. 4: Placing the discs

Please note:

If you are using the *Statement V2 TT1* tangential tonearm, position the half-cut-away discs with the cut-away section at the rear of the turntable.


3.

Place the four cork damping plates on top of the four corner pillars.

Place 4 pcs. damping plates if not assembled already from the factory


Please note:

Again, **being careful** not to damage the bearing spindle on top of the pendulum shaft, lower the stainless steel cross frame over the pendulum shaft so that it rests on the four cork damping plates.

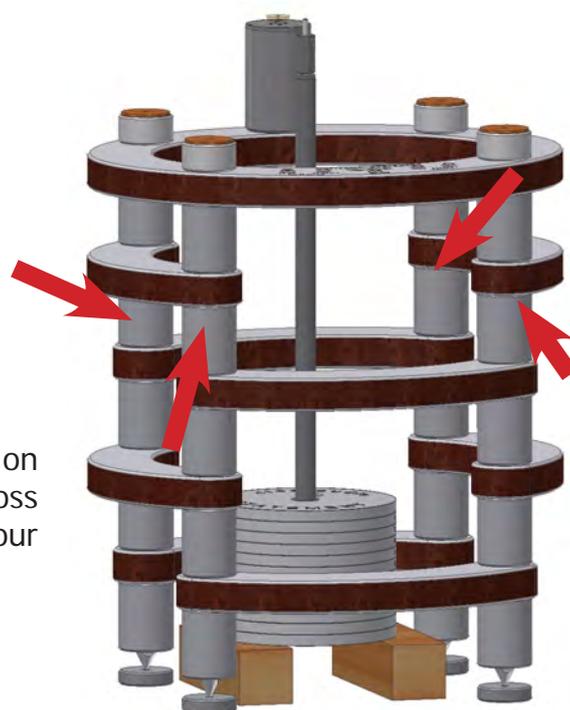

Pic. 5: Placing the cork damping plates

5.
Set the cross shaped massive metal part through the spindle onto the four cork.

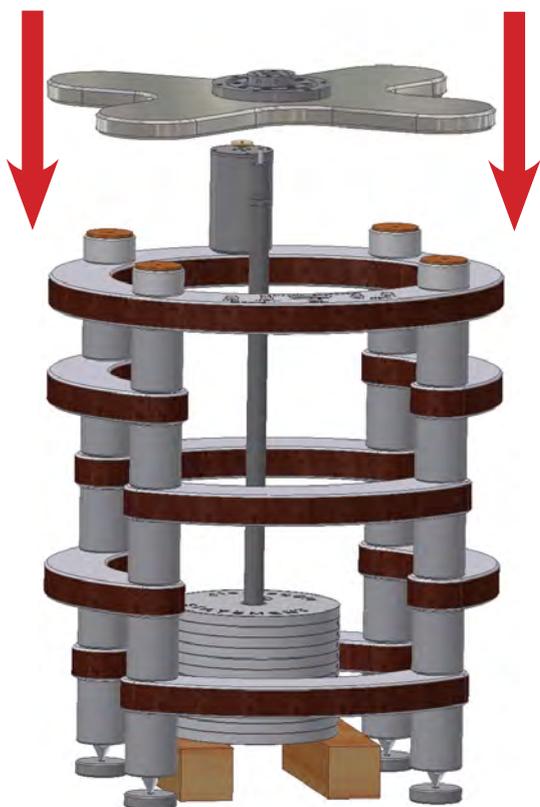


Pic. 6: Placing the metal part



Pic. 6.1: Placing the metal part

6.
Tighten the bearing to the shaft by tightening the screws in the bearing collar (8x).

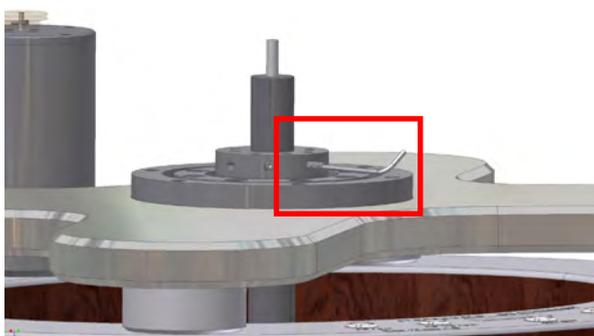

Pic. 7: Tighten the bearing



User manual

7.
Lift the pendulum shaft to align the V-shaped groove in the pendulum shaft with the locking screws in the gimbal bearing. Lock the gimbal bearing to the pendulum shaft by fully tightening the eight screws so that they locate in the groove of the pendulum shaft.


IMPORTANT!

Carefully lift the whole upper section, raising the pendulum off of the wooden blocks.



Pic. 8: Lifting the upper part

8.
Remove the wooden blocks from beneath the turntable and carefully lower the upper section back onto the four cork damping plates.

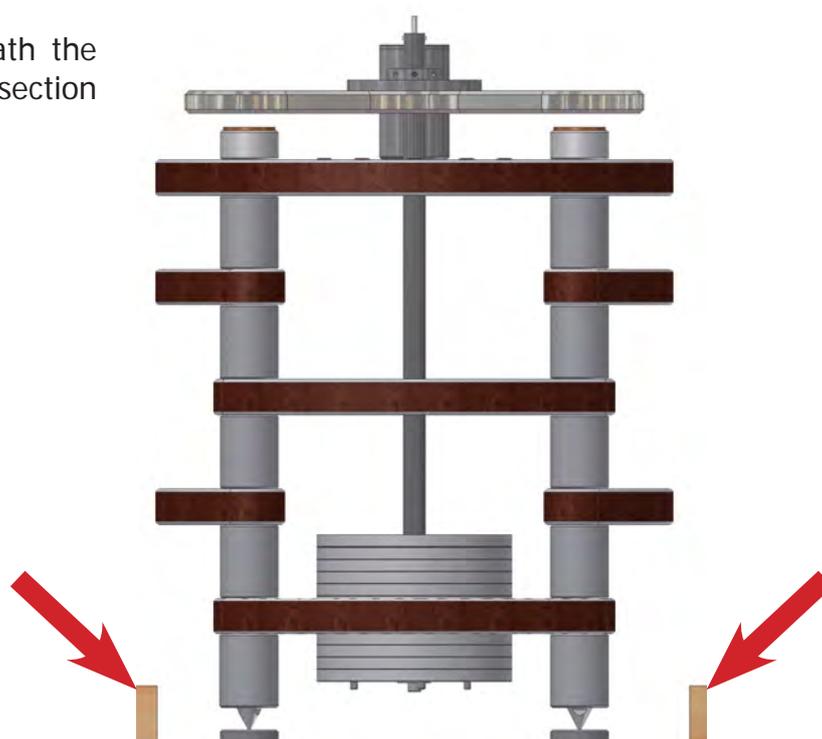


Pic. 9: Removing the wood spacers

9.
Lock the floating chassis to the pendulum shaft by fully tightening the eight screws.

IMPORTANT!

Being careful not to damage the bearing spindle on top of the pendulum shaft, lower the main floating chassis over the top of the pendulum shaft.

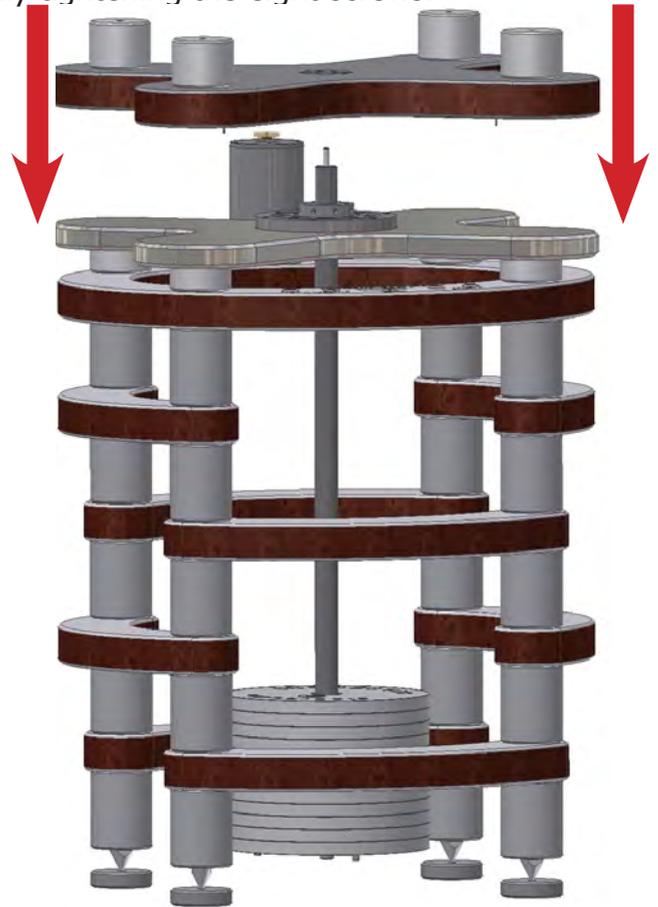


Pic. 10 : Removing the wood spacers

10.
Apply 3 to 4 drops of the **Clearaudio Synthetic Bearing Oil** (also available at www.analogshop.de Art. No. AC068) to the bearing spindle.

Please apply 3 to 4 drps
to the bearing spindle

Lock the 8 screws

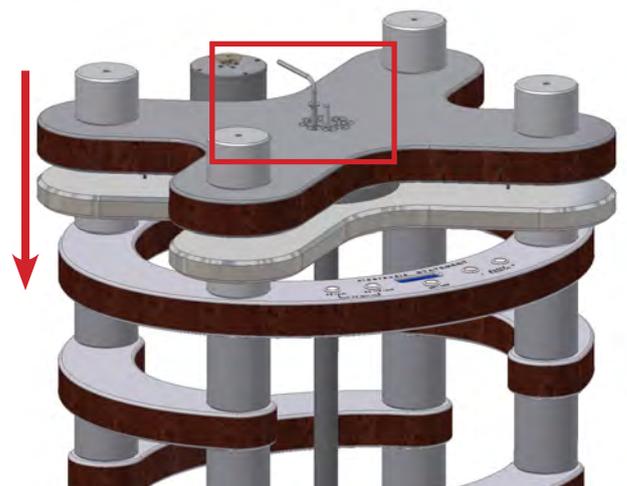


Pic. 11: Tighten the bearing screws

User manual

11.


Place the lower drive bearing housing over the bearing spindle.

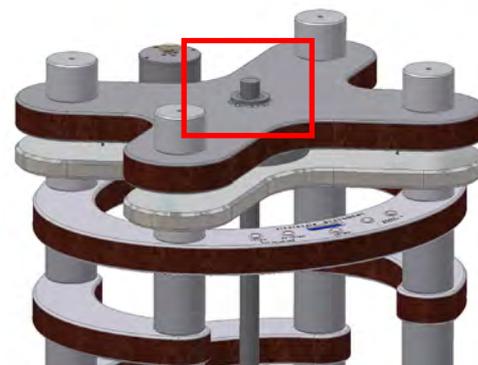

Pic. 12: Placing the lower bearing house

12.


Place the lower magnetic drive platter over the bearing housing making sure that the ring of magnets faces upwards.

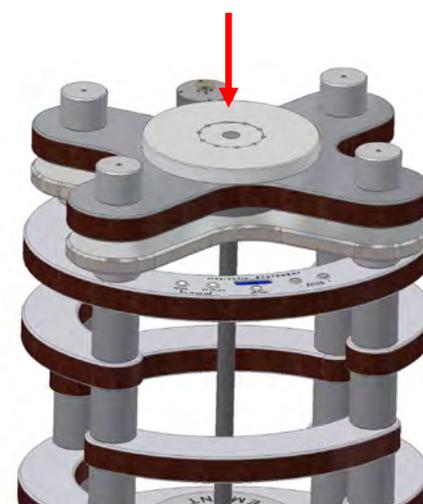

Pic. 13: Placing the lower magnetic drive platter

13.

For the next step, please apply 3 to 4 drops of the **Clearaudio Synthetic Bearing Oil** also onto the main bearing spindle.

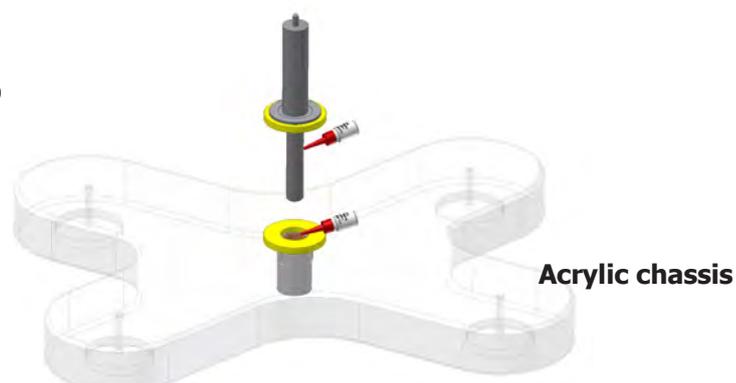

Pic. 14: Oiling the main bearing spindle

14.
Making sure that the circular cut-outs in the corners of the acrylic chassis are on the underside. **Carefully (!)** insert the bearing spindle into the bearing sleeve in the acrylic chassis.

IMPORTANT!

Be careful not to allow the magnets to snatch the bearing as you insert it.




Pic. 15: To insert the bearing spindle into the bearing sleeve

15.
Attach the upper drive platter to the bottom of the main bearing spindle by screwing the bottom cap very tightly to the bottom of the main bearing. Make sure that the ring of magnets faces down.

IMPORTANT!

Gently push the upper magnetic drive platter upwards against the acrylic chassis to ensure that the platter fully sits in the bearing.

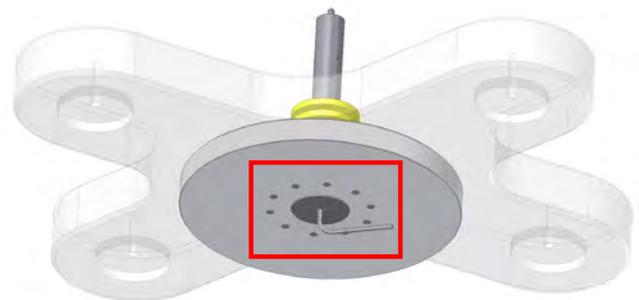


Pic. 16: To attach the upper drive platter to the bottom of the main bearing spindle


User manual

16.

Lower the acrylic chassis onto the four pillars at the corners of the floating chassis so that the circular cut-outs sit over the pillars.

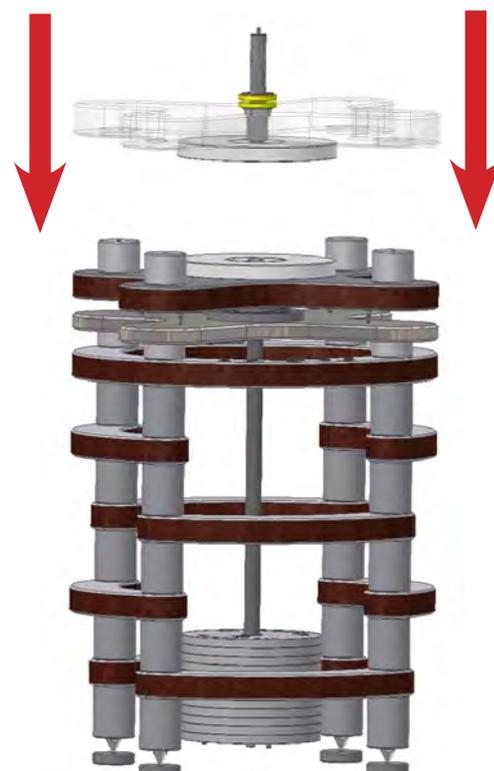**Pic. 17:** To lower the acrylic chassis**17.**

Firmly screw the four stainless steel arm bases through the acrylic chassis into the four pillars of the floating chassis.

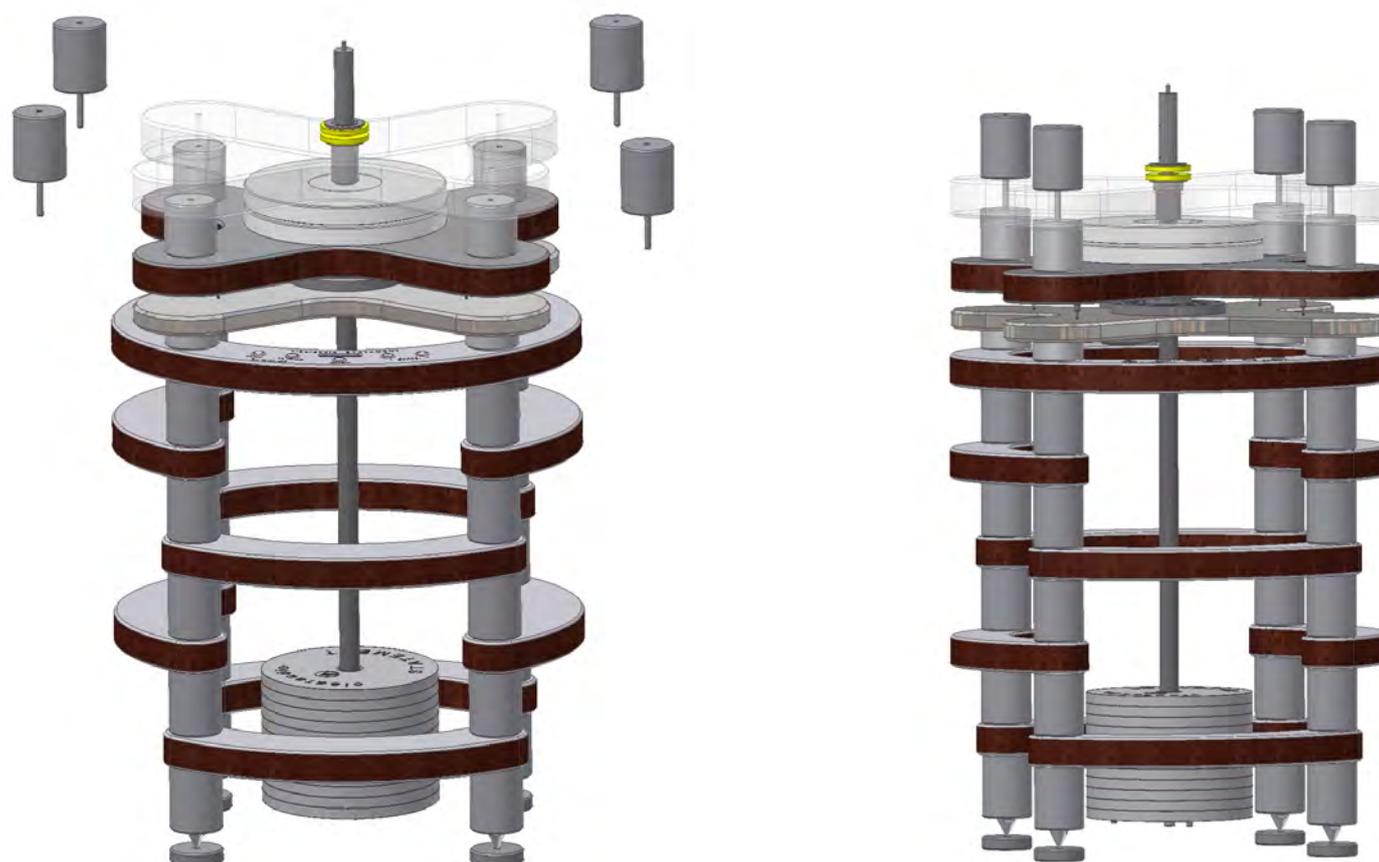**Pic. 18:** Setting the arm bases

18.
Lower first the metal flywheel over the main bearing.

In the next step lower the main platter on top of the metal flywheel, making sure that the dot on the top of the bearing and the platter are aligned.



Pic. 19: Setting the platters



Pic. 20: Finished set up

4. Motor adjustment

1. Push the motor pulley over the motor spindle and lock in place by gently tightening the three screws in the side of the pulley. (If not already factory adjusted)



Pic. 21: Setting the motor pulley

2. Place the drive belt first around the lower drive platter and then around the motor pulley.



Pic. 22: Placing the drive belt

3. Plug the supplied *Statement V2* power supply first into the back of the motor, and finally into the mains supply.
4. To assembly the tonearm please refer to the instruction manual of the manufacturer.

The setup of your *Statement V2* turntable is now complete!

Clearaudio wish you al lot of pleasure and musical enjoyment with your *Statement V2*.

5. Troubleshooting

If you have a problem with your *Statement* turntable, first check the possible causes to rule out incorrect operation.

If the error persists, please contact your dealer!

Never try to open the device and/or repair it yourself, this will void the warranty!

Error	Cause	Measure
Device does not work	Is the power cord plugged in?	Check the connection.
No sound	The tonearm and phono stage are not properly connected.	Check the cable connection between the tonearm and the phono stage.
	Is the amp turned on?	Check the power supply to the amplifier.
	The volume on the amplifier/loudspeaker is set too low or on „mute“.	Check the volume settings.
	Is the cartridge protective cap still attached?	Remove the cartridge's protective cap.
	Is the tonearm in the raised position?	Lower the tonearm into the lead-in groove.
	Is the stylus damaged?	Check the stylus and have the cartridge checked by a specialist if necessary.
Bad sound / noise	Is the record or the stylus dirty or damaged?	Clean the record / or the cartridge. Clearaudio offers many helpful accessories for care and cleaning. In the event of damage, we recommend an assessment by a specialist and, if necessary, an exchange.
	Is the cartridge properly mounted into the tonearm?	Check the installation using the relevant user manual and correct them if necessary.
	Has the tracking force been set too high?	Adjust the tracking force.
	Is the correct operating mode (MM / MC) set on the amplifier?	Check the settings of your phono stage.
	The pre/amp does not have enough gain.	Check the settings of your phono stage.
	Pre/amp is mismatched.	Swap the plugs of the turntable that are connected to the left and right outputs.



Needle bounces or slides across record	Is the record or the stylus dirty or damaged?	Clean the record / or the cartridge. Clearaudio offers many helpful accessories for care and cleaning. In the event of damage, we recommend an assessment by a specialist and, if necessary, an exchange.
	Has the tracking force been set too high?	Adjust the tracking force.
	Is the record deformed or scratched?	Use a record clamp or replace the record.
	Is the turntable level?	Check the alignment of the turntable and adjust if necessary.
Platter does not turn	Is the drive belt properly attached?	Check the position of the drive belt.
	Is the power cord connected properly?	Check the connection.
	No speed was selected / speed selection in position „0“/“OFF“.	Select a speed and start the turntable.
Noisy sound	Is the drive belt properly attached?	Check the position of the drive belt. Is it too loose and needs to be changed?
Humming noises	Contact problems with the signal connections (e.g. cinch plugs, adapters for extensions)	Check all connections; reduce the level on the (pre-)amplifier to a low volume for acoustic checking of gross errors.
	Metal housing acts as an antenna and catches hum.	It can be helpful for conductivity to connect the metal parts of the turntable to the ground of the (phono) preamplifier. The turntable provides a grounding terminal for this purpose. Use a sufficiently thick wire to establish the ground connection.
	The pickup pins are mixed up, not connected correctly or defective.	Check the pin assignment of the pickup.
The music doesn't sound like usual	Wrong speed selected.	Check the record for recommended speed. There are also records in LP format (30 cm) that have to be played at 45 rpm ("maxi singles") and small records in single format (17 cm) that have to be played at 33 rpm (so-called "EP's").
	The turntable is spinning too fast/too slow.	Adjust the speed according to the operating instructions.

6. Technical Data

Construction details:	Aluminium, stainless steel and bullet proof wood
Speed options:	33 1/3, 45, 78rpm
Drive unit:	- High-torque 24V DC motor, belt-driven - Magnetic coupling of turntable and additional drive platter
Bearing:	- Inverted bearing in lower drive platter - Clearaudio patented ceramic magnetic bearing (CMB) in main platter / upper drive platter assembly
Platter:	98mm / 3.86 inch main platter, made out of synthetic material with high-density and excellent dimension stability // precision CNC machined surface, solid stainless steel sub-platter, dynamically balanced
Speed accuracy (measured):	< ±0.03%
Power consumption:	Max. consumption: 19 watts Consumption in operation: 8 watts Off mode: 0.0 watts (if main switch is in ,0` position)
Total weight:	Approx. 350kg (without tonearm and power supply)
Dimensions (W/D/H):	Approx. 27.17 x 24.41 x 52.17 inches (with TT1 tonearm)
Dimensions (W/D/H):	Approx. 690 x 620 x 1325mm (with TT1 tonearm)
Manufacturer's warranty:	10 years*

* Provided that the warranty card is correctly completed and returned to **Clearaudio**, or your product is registered online at <https://clearaudio.de/en/service/registration.php>, within 14 days of purchase.



The full, extended warranty period for the *Statement* turntable is 10 years. To receive this full **Clearaudio** warranty, you must either complete and return the relevant section of the warranty registration card to **Clearaudio**, or register your product online at <https://clearaudio.de/en/service/registration.php>, within 14 days of purchase. Otherwise only the legal warranty can be considered.

The full 10 year warranty can only be honoured if the product is returned in its original packing.

ENGLISH WARRANTY

For warranty information, contact your local **Clearaudio** distributor.

RETAIN YOUR PURCHASE RECEIPT

Your purchase receipt is your permanent record of a valuable purchase. It should be kept in a safe place to be referred to as necessary for insurance purposes or when corresponding with **Clearaudio**.

IMPORTANT

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase.

Your purchase receipt or invoice is adequate for such proof.

FOR U.K. ONLY

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

FRANÇAIS GARANTIE

Pour des informations sur la garantie, contacter le distributeur local **Clearaudio**.

CONSERVER L'ATTESTATION D'ACHAT

L'attestation d'achat est la preuve permanente d'un achat de valeur. La conserver en lieu sûr pour s'y reporter aux fins d'obtention d'une couverture d'assurance ou dans le cadre de correspondances avec **Clearaudio**.

IMPORTANT

Pour l'obtention d'un service couvert par la garantie, il incombe au client d'établir la preuve de l'achat et d'en corroborer la date. Le reçu ou la facture constituent des preuves suffisantes.

DEUTSCH GARANTIE

Bei Garantiefragen wenden Sie sich bitte zunächst an Ihren **Clearaudio** Händler. Heben Sie Ihren Kaufbeleg gut auf.

WICHTIG!

Die Angaben auf Ihrer Quittung erlauben uns die Identifizierung Ihres Gerätes und belegen mit dem Kaufdatum die Dauer Ihrer Garantie-Ansprüche. Für Serviceleistungen benötigen wir stets die Gerätenummer. Diese finden Sie auf dem Typenschild auf der Rückseite des Gerätes oder auch in der beigefügten Garantie-Registrierkarte.

NEDERLANDS GARANTIE

Voor inlichtingen omtrent garantie dient u zich tot uw plaatselijke **Clearaudio**.

UW KWITANTIE, KASSABON E.D. BEWAREN

Uw kwitantie, kassabon e.d. vormen uw bewijs van aankoop van een waardevol artikel en dienen op een veilige plaats bewaard te worden voor evt, verwijzing bijv, in verbond met verzekering of bij correspondentie met **Clearaudio**.

BELANGRIJK

Bij een evt, beroep op de garantie is het de verantwoordelijkheid van de consument een gedateerd bewijs van aankoop te tonen. Uw kassabon of factuur zijn voldoende bewijs.

 **ITALIANO**
GARANZIA

L'apparecchio è coperto da una garanzia di buon funzionamento della durata di un anno, o del periodo previsto dalla legge, a partire dalla data di acquisto comprovata da un documento attestante il nominativo del Rivenditore e la data di vendita. La garanzia sarà prestata con la sostituzione o la riparazione gratuita delle parti difettose. Non sono coperti da garanzia difetti derivanti da uso improprio, errata installazione, manutenzione effettuata da personale non autorizzato o, comunque, da circostanze che non possano riferirsi a difetti di funzionamento dell'apparecchio. Sono inoltre esclusi dalla garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.

Gli apparecchi verranno riparati presso i nostri Centri di Assistenza Autorizzati. Le spese ed i rischi di trasporto sono a carico del cliente. La casa costruttrice declina ogni responsabilità per danni diretti o indiretti provocati dalla inosservanza delle prescrizioni di installazione, uso e manutenzione dettagliate nel presente manuale o per guasti dovuti ad uso continuato a fini professionali.

 **ESPAÑOL**
GARANTIA

Para obtener información acerca de la garantía póngase en contacto con su distribuidor **Clearaudio**.

GUARDE SU RECIBO DE COMPRA

Su recibo de compra es su prueba permanente de haber adquirido un aparato de valor, Este recibo deberá guardarlo en un lugar seguro y utilizarlo como referencia cuando tenga que hacer uso del seguro o se ponga en contacto con **Clearaudio**.

IMPORTANTE

Cuando solicite el servicio otorgado por la garantía el usuario tiene la responsabilidad de demostrar cuándo efectuó la compra. En este caso, su recibo de compra será la prueba apropiada.



Loving music

clearaudio electronic GmbH

Spardorfer Straße 150

91054 Erlangen

Germany

Phone /Tel.: +49 9131 40300 100

Fax: +49 9131 40300 119

www.clearaudio.de

www.analogshop.de

info@clearaudio.de



Handmade in Germany

Clearaudio Electronic accepts no liability for any misprints.

Technical specifications are subject to change or improvement without prior notice.

Product availability is as long as astock lasts.

Copies and reprints of this document, including extracts, require written consent from

Clearaudio Electronic GmbH, Germany.

2025